

FINE 6019 PIXIE IP Channel Data Table

Specific	Stnd	RBG	RGBW	SHAP	Value	Function
Red	1	1	1	1	0->255	Red
Red fine	2	2	2	2	0->255	Red fine
Green	3	3	3	3	0->255	Green
Green fine	4	4	4	4	0->255	Green fine
Blue	5	5	5	5	0->255	Blue
Blue fine	6	6	6	6	0->255	Blue fine
White	7	7	7	7	0->255	White
White fine	8	8	8	8	0->255	White fine
CTO	9	9	9	9	0->3	None
					4	CCT 2700K
					5	CCT 3200K
					6	CCT 4300K
					7	CCT 5600K
					8	CCT 6500K
					9	CCT 8000K
					10->255	CCT 8000K->2700K
Macro Colour	10	10	10	10	0->9	None
					10->255	Color Macro
Strobe	11	11	11	11	0->3	CLOSED
					4->103	Pluse Strobe Slow to Fast, 1Hz-25Hz
					104->107	OPEN
					108->207	Strobe Slow to Fast, 1Hz-25Hz
					208->212	OPEN
					213->251	Random Strobe Slow to Fast
252->255	OPEN					
Dimmer	12	12	12	12	0->255	Dimmer
Dimmer fine	13	13	13	13	0->255	Dimmer fine
Pan	14	14	14	14	0->255	Pan
Pan fine	15	15	15	15	0->255	Pan fine
Tilt	16	16	16	16	0->255	Tilt
Tilt fine	17	17	17	17	0->255	Tilt fine
Function	18	18	18	18	0->255	Reserved
Reset	19	19	19	19	0->25	NONE
					26->76	ZOOM Reset
					77->127	Pan/Tilt Reset

					128->255	All Reset
Zoom	20	20	20	20	0->255	Zoom Narrow to Wide
Crossfade	21	21	21	21	0->255	Reserved
Red1		22	22		0->255	Dimmer Adjusting
Green1		23	23		0->255	Dimmer Adjusting
Blue1		24	24		0->255	Dimmer Adjusting
white1			25		0->255	Dimmer Adjusting
Red2		25	26		0->255	Dimmer Adjusting
Green2		26	27		0->255	Dimmer Adjusting
Blue2		27	28		0->255	Dimmer Adjusting
white2			29		0->255	Dimmer Adjusting
Red3		28	30		0->255	Dimmer Adjusting
Green3		29	31		0->255	Dimmer Adjusting
Blue3		30	32		0->255	Dimmer Adjusting
white3			33		0->255	Dimmer Adjusting
Red4		31	34		0->255	Dimmer Adjusting
Green4		32	35		0->255	Dimmer Adjusting
Blue4		33	36		0->255	Dimmer Adjusting
white4			37		0->255	Dimmer Adjusting
Red5		34	38		0->255	Dimmer Adjusting
Green5		35	39		0->255	Dimmer Adjusting
Blue5		36	40		0->255	Dimmer Adjusting
white5			41		0->255	Dimmer Adjusting
Red6		37	42		0->255	Dimmer Adjusting
Green6		38	43		0->255	Dimmer Adjusting
Blue6		39	44		0->255	Dimmer Adjusting
white6			45		0->255	Dimmer Adjusting
Red7		40	46		0->255	Dimmer Adjusting
Green7		41	47		0->255	Dimmer Adjusting
Blue7		42	48		0->255	Dimmer Adjusting
white7			49		0->255	Dimmer Adjusting
Red8		43	50		0->255	Dimmer Adjusting
Green8		44	51		0->255	Dimmer Adjusting
Blue8		45	52		0->255	Dimmer Adjusting
white8			53		0->255	Dimmer Adjusting
Red9		46	54		0->255	Dimmer Adjusting
Green9		47	55		0->255	Dimmer Adjusting
Blue9		48	56		0->255	Dimmer Adjusting
white9			57		0->255	Dimmer Adjusting
Red10		49	58		0->255	Dimmer Adjusting
Green10		50	59		0->255	Dimmer Adjusting
Blue10		51	60		0->255	Dimmer Adjusting
white10			61		0->255	Dimmer Adjusting

Red11		52	62		0->255	Dimmer Adjusting
Green11		53	63		0->255	Dimmer Adjusting
Blue11		54	64		0->255	Dimmer Adjusting
white11			65		0->255	Dimmer Adjusting
Red12		55	66		0->255	Dimmer Adjusting
Green12		56	67		0->255	Dimmer Adjusting
Blue12		57	68		0->255	Dimmer Adjusting
white12			69		0->255	Dimmer Adjusting
Red13		58	70		0->255	Dimmer Adjusting
Green13		59	71		0->255	Dimmer Adjusting
Blue13		60	72		0->255	Dimmer Adjusting
white13			73		0->255	Dimmer Adjusting
Red14		61	74		0->255	Dimmer Adjusting
Green14		62	75		0->255	Dimmer Adjusting
Blue14		63	76		0->255	Dimmer Adjusting
white14			77		0->255	Dimmer Adjusting
Red15		64	78		0->255	Dimmer Adjusting
Green15		65	79		0->255	Dimmer Adjusting
Blue15		66	80		0->255	Dimmer Adjusting
white15			81		0->255	Dimmer Adjusting
Red16		67	82		0->255	Dimmer Adjusting
Green16		68	83		0->255	Dimmer Adjusting
Blue16		69	84		0->255	Dimmer Adjusting
white16			85		0->255	Dimmer Adjusting
Red17		70	86		0->255	Dimmer Adjusting
Green17		71	87		0->255	Dimmer Adjusting
Blue17		72	88		0->255	Dimmer Adjusting
white17			89		0->255	Dimmer Adjusting
Red18		73	90		0->255	Dimmer Adjusting
Green18		74	91		0->255	Dimmer Adjusting
Blue18		75	92		0->255	Dimmer Adjusting
white18			93		0->255	Dimmer Adjusting
Red19		76	94		0->255	Dimmer Adjusting
Green19		77	95		0->255	Dimmer Adjusting
Blue19		78	96		0->255	Dimmer Adjusting
white19			97		0->255	Dimmer Adjusting
Shape Selection				22	0->7	NONE
					8->10	Static Shape1~Static Shape3
					11	NONE
					12->14	Static Shape4~Static Shape5
					15->63	Animation1~Animation49
					64	NONE

					65->68	Animation50~Animation53
					69	NONE
					70	Animation54
					71-255	NONE
Shape Speed				23	0->63	STOP
					64->158	Speed Fast to Slow
					159->160	STOP
					161->255	Speed Slow to Fast
Shape Fade				24	0->15	NONE
					16->255	Fade in Fade out and Curve Selection
Shape R				25	0->255	Shape Red
Shape G				26	0->255	Shape Green
Shape B				27	0->255	Shape Blue
Shape W				28	0->255	Shape White
Shape Dimmer				29	0->255	Shape Dimmer
Background				30	0->255	Background Dimmer
Shape Transition				31	0->4	No Transition
					5->255	Transition Time100ms->4s
Shape Offset				32	0->255	Shape Offset
Shape Strobe				33	0->3	CLOSED
					4->103	Pluse Strobe Slow to Fast, 1Hz-25Hz
					104->107	OPEN
					108->207	Strobe Slow to Fast, 1Hz-25Hz
					208->212	OPEN
					213->251	Random Strobe Slow to Fast
					252->255	OPEN
Background Strobe				34	0->3	CLOSED
					4->103	Pluse Strobe Slow to Fast, 1Hz-25Hz
					104->107	OPEN
					108->207	Strobe Slow to Fast, 1Hz-25Hz
					208->212	OPEN
					213->251	Random Strobe Slow to Fast
					252->255	OPEN

Background Select				35	0->8	NONE
					9->23	Background Shape Selection
					24->254	NONE
					255	Background Mirror ON