

FINE6010 Batten IP Stand

ID	Specific	Value	Description
1	Tilt	0->255 Tilt Adjusting	Tilt
2	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
3	Dimmer	0->255	Dimmer
4	Dimmer Fine	0->255	Dimmer Fine
5	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	Shutter
6	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	
7	Zoom	0->255 (narrow->wide)	
8	Ctrl	See "Control Settings channel" table	Control/Settings
9	MainDimmer	0->255	Main Dimmer
10	MainRed	0->255	Main Red
11	MainGre	0->255	Main Green
12	MainBlu	0->255	Main Blue
13	MainWhi	0->255	Main White
14	MainCTC	0 No Function 1 CCT 8000K 2->83 CCT 7979K->6222K 84 CCT 6200K 85->111 CCT 6178K->5621K 112 CCT 5600K 113->175 CCT 5579K->4223K 176 CCT 4200K 177->222 CCT 4181K->3221K 223 CCT 3200K 224->254 CCT 3179K->2521K 255 CCT 2500K	
15	MainEffSel	0->7 None 8->9 ColorEff1 10->11 ColorEff2 12->13 ColorEff3 14->15 ColorEff4 16->17 ColorEff5 18->19 ColorEff6 20->21 ColorEff7 22->23 ColorEff8 24->25 ColorEff9 26->27 ColorEff10 28->29 ColorEff11 30->31 ColorEff12 32->33 ColorEff13 34->35 ColorEff14 36->37 ColorEff15 38->39 ColorEff16 40->41 ColorEff17 42->43 ColorEff18 44->45 ColorEff19 46->47 ColorEff20 48->49 ColorEff21 50->51 ColorEff22 52->53 ColorEff23 54->55 ColorEff24 56->57 ColorEff25 58->59 ColorEff26 60->61 ColorEff27 62->63 ColorEff28 64->65 ColorEff29 66->67 ColorEff30 68->69 ColorEff31 70->71 ColorEff32 72->73 ColorEff33 74->75 ColorEff34 76->77 ColorEff35 78->79 ColorEff36 80->81 ColorEff37 82->83 ColorEff38 84->85 ColorEff39 86->87 ColorEff40 88->89 ColorEff41 90->235 ColorEff1 to ColorEff41 Loop 236->245 Color Random Point (Range:1-10) 246->255 Random Point(Range: 1-10)	
16	MainEffSpd	0->7 Static 8->255 Speed Slow To Fast (3s->0s)	
17	EdgeDimmer	0->255	
18	EdgeRed	0->255	
19	EdgeGre	0->255	
20	EdgeBlu	0->255	
21	EdgeCW	0->255	
22	EdgeWW	0->255	
23	EdgeWW	0 No Function 1 10000K 2 ->70 9971K->8044K 71->72 8000K 73->123 7959K->6541K 124->125 6500K 126->155 6485K->5634K 156->157 5600K 158->201 5549K->4330K 202->203 4300K 204->239 4274K->3225K 240->241 3200K 242->254 3168K->2828K 255 2800K	

24	EdgeEffSel	0->7 None 8->9 ColorEff1 10->11 ColorEff2 12->13 ColorEff3 14->15 ColorEff4 16->17 ColorEff5 18->19 ColorEff6 20->21 ColorEff7 22->23 ColorEff8 24->25 ColorEff9 26->27 ColorEff10 28->29 ColorEff11 30->31 ColorEff12 32->33 ColorEff13 34->35 ColorEff14 36->37 ColorEff15 38->39 ColorEff16 40->41 ColorEff17 42->43 ColorEff18 44->45 ColorEff19 46->47 ColorEff20 48->49 ColorEff21 50->51 ColorEff22 52->53 ColorEff23 54->55 ColorEff24 56->57 ColorEff25 58->59 ColorEff26 60->61 ColorEff27 62->63 ColorEff28 64->65 ColorEff29 66->67 ColorEff30 68->69 ColorEff31 70->71 ColorEff32 72->73 ColorEff33 74->75 ColorEff34 76->77 ColorEff35 78->79 ColorEff36 80->81 ColorEff37 82->83 ColorEff38 84->85 ColorEff39 86->87 ColorEff40 88->89 ColorEff41 90->91 ColorEff42 92->93 ColorEff43 94->95 ColorEff44 96->97 ColorEff45 98->99 ColorEff46 100->101 ColorEff47 102->103 ColorEff48 104->105 ColorEff49 106->107 ColorEff50 108->109 ColorEff51 110->111 ColorEff52 112->113 ColorEff53 114->115 ColorEff54 116->117 ColorEff55 118->119 ColorEff56 120->121 ColorEff57 122->123 ColorEff58 124->125 ColorEff59 126->127 ColorEff60 128->129 ColorEff61 130->131 ColorEff62 132->133 ColorEff63 134->135 ColorEff64 136->137 ColorEff65 138->139 ColorEff66 140->141 ColorEff67 142->143 ColorEff68 144->145 ColorEff69 146->147 ColorEff70 148->149 ColorEff71 150->151 ColorEff72 152->153 ColorEff73 154->155 ColorEff74 156->157 ColorEff75 158->159 ColorEff76 160->161 ColorEff77 162->163 ColorEff78 164->165 ColorEff79 166->167 ColorEff80 168->169 ColorEff81 170->171 ColorEff82 172->173 ColorEff83 174->175 ColorEff84 176->177 ColorEff85 178->179 ColorEff86 180->215 ColorEff1 to ColorEff86 Loop 216->235 Color Random Point (Range:1-20) 236->255 Random Point (Range: 1-20)	
25	EdgeEffSpd	0->7 Static 8->255 Speed Slow To Fast (3s->0s)	

FINE6010 Batten IP Mode2

ID	Specific	Value	Description
1	Tilt	0->255 Tilt Adjusting	Tilt
2	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
3	Dimmer	0->255	Dimmer
4	Dimmer Fine	0->255	Dimmer Fine
5	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	Shutter
6	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	
7	Zoom	0->255 (narrow->wide)	
8	Ctrl	See "Control Settings channel" table	Control/Settings
9	MainDimmer	0->255	Main Dimmer
10	MainRed	0->255	Main Red
11	MainGre	0->255	Main Green
12	MainBlu	0->255	Main Blue
13	MainWhi	0->255	Main White
14	MainCTC	0 No Function 1 CCT 8000K 2->83 CCT 7979K->6222K 84 CCT 6200K 85->111 CCT 6178K->5621K 112 CCT 5600K 113->175 CCT 5579K->4223K 176 CCT 4200K 177->222 CCT 4181K->3221K 223 CCT 3200K 224->254 CCT 3179K->2521K 255 CCT 2500K	
15	MainEffSel	0->7 None 8->9 ColorEff1 10->11 ColorEff2 12->13 ColorEff3 14->15 ColorEff4 16->17 ColorEff5 18->19 ColorEff6 20->21 ColorEff7 22->23 ColorEff8 24->25 ColorEff9 26->27 ColorEff10 28->29 ColorEff11 30->31 ColorEff12 32->33 ColorEff13 34->35 ColorEff14 36->37 ColorEff15 38->39 ColorEff16 40->41 ColorEff17 42->43 ColorEff18 44->45 ColorEff19 46->47 ColorEff20 48->49 ColorEff21 50->51 ColorEff22 52->53 ColorEff23 54->55 ColorEff24 56->57 ColorEff25 58->59 ColorEff26 60->61 ColorEff27 62->63 ColorEff28 64->65 ColorEff29 66->67 ColorEff30 68->69 ColorEff31 70->71 ColorEff32 72->73 ColorEff33 74->75 ColorEff34 76->77 ColorEff35 78->79 ColorEff36 80->81 ColorEff37 82->83 ColorEff38 84->85 ColorEff39 86->87 ColorEff40 88->89 ColorEff41 90->235 ColorEff1 to ColorEff41 Loop 236->245 Color Random Point (Range:1-10) 246->255 Random Point (Range: 1-10)	Main Effect Selection

16	MainEffSpd	0->7 Static 8->255 Speed Slow To Fast (3s->0s)	Main Effect Speed Adjusting
17	MainEffOfst	0->15 Shape Forward Moving 16->31 Shape Backward Moving 32->47 Shape Bounce Moving 48->159 Reserve 160->255 static sub Shape (This Function will be effective when it has many sub Shape)	Main Effect Offset
18	MainEffTrans	0->3 Fade In Fade Out 4->7 Fade In 8->11 Fade Out 12->15 None 16-255 Shadow(0s->8s)	Main Effect transition
19	MainBkgDimm	0->255	Main Effect Background Dimmer
20	MainBkgRed	0->255	
21	MainBkgGre	0->255	
22	MainBkgBlu	0->255	
23	MainBkgWhi	0->255	
24	EdgeDimmer	0->255	
25	EdgeRed	0->255	
26	EdgeGre	0->255	
27	EdgeBlu	0->255	
28	EdgeCW	0->255	
29	EdgeWW	0->255	
30	EdgeWW	0 No Function 1 1000K 2 ->70 9971K->8044K 71->72 8000K 73->123 7959K->6541K 124->125 6500K 126->155 6485K->5634K 156->157 5600K 158->201 5549K->4330K 202->203 4300K 204->239 4274K->3225K 240->241 3200K 242->254 3168K->2828K 255 2800K	
31	EdgeEffSel	0->7 None 8->9 ColorEff1 10->11 ColorEff2 12->13 ColorEff3 14->15 ColorEff4 16->17 ColorEff5 18->19 ColorEff6 20->21 ColorEff7 22->23 ColorEff8 24->25 ColorEff9 26->27 ColorEff10 28->29 ColorEff11 30->31 ColorEff12 32->33 ColorEff13 34->35 ColorEff14 36->37 ColorEff15 38->39 ColorEff16 40->41 ColorEff17 42->43 ColorEff18 44->45 ColorEff19 46->47 ColorEff20 48->49 ColorEff21 50->51 ColorEff22 52->53 ColorEff23 54->55 ColorEff24 56->57 ColorEff25 58->59 ColorEff26 60->61 ColorEff27 62->63 ColorEff28 64->65 ColorEff29 66->67 ColorEff30 68->69 ColorEff31 70->71 ColorEff32 72->73 ColorEff33 74->75 ColorEff34 76->77 ColorEff35 78->79 ColorEff36 80->81 ColorEff37 82->83 ColorEff38 84->85 ColorEff39 86->87 ColorEff40 88->89 ColorEff41 90->91 ColorEff42 92->93 ColorEff43 94->95 ColorEff44 96->97 ColorEff45 98->99 ColorEff46 100->101 ColorEff47 102->103 ColorEff48 104->105 ColorEff49 106->107 ColorEff50 108->109 ColorEff51 110->111 ColorEff52 112->113 ColorEff53 114->115 ColorEff54 116->117 ColorEff55 118->119 ColorEff56 120->121 ColorEff57 122->123 ColorEff58 124->125 ColorEff59 126->127 ColorEff60 128->129 ColorEff61 130->131 ColorEff62 132->133 ColorEff63 134->135 ColorEff64 136->137 ColorEff65 138->139 ColorEff66 140->141 ColorEff67 142->143 ColorEff68 144->145 ColorEff69 146->147 ColorEff70 148->149 ColorEff71 150->151 ColorEff72 152->153 ColorEff73 154->155 ColorEff74 156->157 ColorEff75 158->159 ColorEff76 160->161 ColorEff77 162->163 ColorEff78 164->165 ColorEff79 166->167 ColorEff80 168->169 ColorEff81 170->171 ColorEff82 172->173 ColorEff83 174->175 ColorEff84 176->177 ColorEff85 178->179 ColorEff86 180->215 ColorEff1 to ColorEff86 Loop 216->235 Color Random Point (Range:1-20) 236->255 Random Point(Range: 1-20)	Edge Effect Selection
32	EdgeEffSpd	0->7 Static 8->255 Speed Slow To Fast (3s->0s)	Edge Effect Speed Adjusting
33	EdgeEffOfst	0->15 Shape Forward Moving 16->31 Shape Backward Moving 32->47 Shape Bounce Moving 48->159 Reserve 160->255 static sub Shape (This Function will be effective when it has many sub Shape)	Edge Effect Offset
34	EdgeEffTrans	0->3 Fade In Fade Out 4->7 Fade In 8->11 Fade Out 12->15 None 16-255 Shadow(0s->8s)	Edge Effect transition
35	EdgeBkgDimm	0->255	Edge Effect Background Dimmer
36	EdgeBkgRed	0->255	Edge Effect Background Red
37	EdgeBkgGre	0->255	Edge Effect Background Green
38	EdgeBkgBlu	0->255	Edge Effect Background Blue
39	EdgeBkgCw	0->255	Edge Effect Background Cold White
40	EdgeBkgWw	0->255	Edge Effect Background Warm White

FINE6010 Batten IP Mode3

ID	Specific	Value	Description
1	Tilt	0->255 Tilt Adjusting	Tilt
2	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
3	Dimmer	0->255	Dimmer
4	Dimmer Fine	0->255	Dimmer Fine
5	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	Shutter
6	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	
7	Zoom	0->255 (narrow->wide)	
8	Ctrl	See "Control Settings channel" table	
9	MainClrP1 R	0->255 Dimmer Adjusting	
10	MainClrP1 G	0->255 Dimmer Adjusting	
11	MainClrP1 B	0->255 Dimmer Adjusting	
12	MainClrP1 W	0->255 Dimmer Adjusting	
13	MainClrP2 R	0->255 Dimmer Adjusting	
14	MainClrP2 G	0->255 Dimmer Adjusting	
15	MainClrP2 B	0->255 Dimmer Adjusting	
16	MainClrP2 W	0->255 Dimmer Adjusting	
17	MainClrP3 R	0->255 Dimmer Adjusting	
18	MainClrP3 G	0->255 Dimmer Adjusting	
19	MainClrP3 B	0->255 Dimmer Adjusting	
20	MainClrP3 W	0->255 Dimmer Adjusting	
21	MainClrP4 R	0->255 Dimmer Adjusting	
22	MainClrP4 G	0->255 Dimmer Adjusting	
23	MainClrP4 B	0->255 Dimmer Adjusting	
24	MainClrP4 W	0->255 Dimmer Adjusting	
25	MainClrP5 R	0->255 Dimmer Adjusting	
26	MainClrP5 G	0->255 Dimmer Adjusting	
27	MainClrP5 B	0->255 Dimmer Adjusting	
28	MainClrP5 W	0->255 Dimmer Adjusting	
29	MainClrP6 R	0->255 Dimmer Adjusting	
30	MainClrP6 G	0->255 Dimmer Adjusting	
31	MainClrP6 B	0->255 Dimmer Adjusting	
32	MainClrP6 W	0->255 Dimmer Adjusting	
33	MainClrP7 R	0->255 Dimmer Adjusting	
34	MainClrP7 G	0->255 Dimmer Adjusting	
35	MainClrP7 B	0->255 Dimmer Adjusting	
36	MainClrP7 W	0->255 Dimmer Adjusting	
37	MainClrP8 R	0->255 Dimmer Adjusting	
38	MainClrP8 G	0->255 Dimmer Adjusting	
39	MainClrP8 B	0->255 Dimmer Adjusting	
40	MainClrP8 W	0->255 Dimmer Adjusting	
41	MainClrP9 R	0->255 Dimmer Adjusting	
42	MainClrP9 G	0->255 Dimmer Adjusting	
43	MainClrP9 B	0->255 Dimmer Adjusting	
44	MainClrP9 W	0->255 Dimmer Adjusting	
45	MainClrP10 R	0->255 Dimmer Adjusting	
46	MainClrP10 G	0->255 Dimmer Adjusting	
47	MainClrP10 B	0->255 Dimmer Adjusting	
48	MainClrP10 W	0->255 Dimmer Adjusting	
49	Edge W1 CW	0->255 Dimmer Adjusting	
50	Edge W1 WW	0->255 Dimmer Adjusting	
51	Edge W2 CW	0->255 Dimmer Adjusting	
52	Edge W2 WW	0->255 Dimmer Adjusting	
53	Edge W3 CW	0->255 Dimmer Adjusting	
54	Edge W3 WW	0->255 Dimmer Adjusting	
55	Edge W4 CW	0->255 Dimmer Adjusting	
56	Edge W4 WW	0->255 Dimmer Adjusting	
57	Edge W5 CW	0->255 Dimmer Adjusting	
58	Edge W5 WW	0->255 Dimmer Adjusting	
59	Edge W6 CW	0->255 Dimmer Adjusting	
60	Edge W6 WW	0->255 Dimmer Adjusting	
61	Edge W7 CW	0->255 Dimmer Adjusting	
62	Edge W7 WW	0->255 Dimmer Adjusting	
63	Edge W8 CW	0->255 Dimmer Adjusting	
64	Edge W8 WW	0->255 Dimmer Adjusting	
65	Edge W9 CW	0->255 Dimmer Adjusting	
66	Edge W9 WW	0->255 Dimmer Adjusting	
67	Edge W10 CW	0->255 Dimmer Adjusting	

68	Edge W10 WW	0->255 Dimmer Adjusting	
69	Edge W11 CW	0->255 Dimmer Adjusting	
70	Edge W11 WW	0->255 Dimmer Adjusting	
71	Edge W12 CW	0->255 Dimmer Adjusting	
72	Edge W12 WW	0->255 Dimmer Adjusting	
73	Edge W13 CW	0->255 Dimmer Adjusting	
74	Edge W13 WW	0->255 Dimmer Adjusting	
75	Edge W14 CW	0->255 Dimmer Adjusting	
76	Edge W14 WW	0->255 Dimmer Adjusting	
77	Edge W15 CW	0->255 Dimmer Adjusting	
78	Edge W15 WW	0->255 Dimmer Adjusting	
79	Edge W16 CW	0->255 Dimmer Adjusting	
80	Edge W16 WW	0->255 Dimmer Adjusting	
81	Edge W17 CW	0->255 Dimmer Adjusting	
82	Edge W17 WW	0->255 Dimmer Adjusting	
83	Edge W18 CW	0->255 Dimmer Adjusting	
84	Edge W18 WW	0->255 Dimmer Adjusting	
85	Edge W19 CW	0->255 Dimmer Adjusting	
86	Edge W19 WW	0->255 Dimmer Adjusting	
87	Edge W20 CW	0->255 Dimmer Adjusting	
88	Edge W20 WW	0->255 Dimmer Adjusting	
89	EdgeRed	0->255 All Edge Red Adjusting	
90	EdgeGre	0->255 All Edge Green Adjusting	
91	EdgeBlu	0->255 All Edge Blue Adjusting	

FINE6010 Batten IP Mode4			
ID	Specific	Value	Description
1	Tilt	0->255 Tilt Adjusting	Tilt
2	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
3	Dimmer	0->255	Dimmer
4	Dimmer Fine	0->255	Dimmer Fine
5	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	MainShutter
6	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	EdgeShutter
7	Zoom	0->255 (narrow->wide)	
8	Ctrl	See "Control Settings channel" table	
9	MainClrP1 R	0->255 Dimmer Adjusting	
10	MainClrP1 G	0->255 Dimmer Adjusting	
11	MainClrP1 B	0->255 Dimmer Adjusting	
12	MainClrP1 W	0->255 Dimmer Adjusting	
13	MainClrP2 R	0->255 Dimmer Adjusting	
14	MainClrP2 G	0->255 Dimmer Adjusting	
15	MainClrP2 B	0->255 Dimmer Adjusting	
16	MainClrP2 W	0->255 Dimmer Adjusting	
17	MainClrP3 R	0->255 Dimmer Adjusting	
18	MainClrP3 G	0->255 Dimmer Adjusting	
19	MainClrP3 B	0->255 Dimmer Adjusting	
20	MainClrP3 W	0->255 Dimmer Adjusting	
21	MainClrP4 R	0->255 Dimmer Adjusting	
22	MainClrP4 G	0->255 Dimmer Adjusting	
23	MainClrP4 B	0->255 Dimmer Adjusting	
24	MainClrP4 W	0->255 Dimmer Adjusting	
25	MainClrP5 R	0->255 Dimmer Adjusting	
26	MainClrP5 G	0->255 Dimmer Adjusting	
27	MainClrP5 B	0->255 Dimmer Adjusting	
28	MainClrP5 W	0->255 Dimmer Adjusting	
29	MainClrP6 R	0->255 Dimmer Adjusting	
30	MainClrP6 G	0->255 Dimmer Adjusting	
31	MainClrP6 B	0->255 Dimmer Adjusting	
32	MainClrP6 W	0->255 Dimmer Adjusting	
33	MainClrP7 R	0->255 Dimmer Adjusting	
34	MainClrP7 G	0->255 Dimmer Adjusting	
35	MainClrP7 B	0->255 Dimmer Adjusting	
36	MainClrP7 W	0->255 Dimmer Adjusting	
37	MainClrP8 R	0->255 Dimmer Adjusting	
38	MainClrP8 G	0->255 Dimmer Adjusting	
39	MainClrP8 B	0->255 Dimmer Adjusting	
40	MainClrP8 W	0->255 Dimmer Adjusting	

41	MainClrP9 R	0->255 Dimmer Adjusting	
42	MainClrP9 G	0->255 Dimmer Adjusting	
43	MainClrP9 B	0->255 Dimmer Adjusting	
44	MainClrP9 W	0->255 Dimmer Adjusting	
45	MainClrP10 R	0->255 Dimmer Adjusting	
46	MainClrP10 G	0->255 Dimmer Adjusting	
47	MainClrP10 B	0->255 Dimmer Adjusting	
48	MainClrP10 W	0->255 Dimmer Adjusting	
49	Edge W1 CW	0->255 Dimmer Adjusting	
50	Edge W1 WW	0->255 Dimmer Adjusting	
51	Edge W2 CW	0->255 Dimmer Adjusting	
52	Edge W2 WW	0->255 Dimmer Adjusting	
53	Edge W3 CW	0->255 Dimmer Adjusting	
54	Edge W3 WW	0->255 Dimmer Adjusting	
55	Edge W4 CW	0->255 Dimmer Adjusting	
56	Edge W4 WW	0->255 Dimmer Adjusting	
57	Edge W5 CW	0->255 Dimmer Adjusting	
58	Edge W5 WW	0->255 Dimmer Adjusting	
59	Edge W6 CW	0->255 Dimmer Adjusting	
60	Edge W6 WW	0->255 Dimmer Adjusting	
61	Edge W7 CW	0->255 Dimmer Adjusting	
62	Edge W7 WW	0->255 Dimmer Adjusting	
63	Edge W8 CW	0->255 Dimmer Adjusting	
64	Edge W8 WW	0->255 Dimmer Adjusting	
65	Edge W9 CW	0->255 Dimmer Adjusting	
66	Edge W9 WW	0->255 Dimmer Adjusting	
67	Edge W10 CW	0->255 Dimmer Adjusting	
68	Edge W10 WW	0->255 Dimmer Adjusting	
69	Edge C1 R	0->255 Dimmer Adjusting	
70	Edge C1 G	0->255 Dimmer Adjusting	
71	Edge C1 B	0->255 Dimmer Adjusting	
72	Edge C2 R	0->255 Dimmer Adjusting	
73	Edge C2 G	0->255 Dimmer Adjusting	
74	Edge C2 B	0->255 Dimmer Adjusting	
75	Edge C3 R	0->255 Dimmer Adjusting	
76	Edge C3 G	0->255 Dimmer Adjusting	
77	Edge C3 B	0->255 Dimmer Adjusting	
78	Edge C4 R	0->255 Dimmer Adjusting	
79	Edge C4 G	0->255 Dimmer Adjusting	
80	Edge C4 B	0->255 Dimmer Adjusting	
81	Edge C5 R	0->255 Dimmer Adjusting	
82	Edge C5 G	0->255 Dimmer Adjusting	
83	Edge C5 B	0->255 Dimmer Adjusting	
84	Edge C6 R	0->255 Dimmer Adjusting	
85	Edge C6 G	0->255 Dimmer Adjusting	
86	Edge C6 B	0->255 Dimmer Adjusting	
87	Edge C7 R	0->255 Dimmer Adjusting	
88	Edge C7 G	0->255 Dimmer Adjusting	
89	Edge C7 B	0->255 Dimmer Adjusting	
90	Edge C8 R	0->255 Dimmer Adjusting	
91	Edge C8 G	0->255 Dimmer Adjusting	
92	Edge C8 B	0->255 Dimmer Adjusting	
93	Edge C9 R	0->255 Dimmer Adjusting	
94	Edge C9 G	0->255 Dimmer Adjusting	
95	Edge C9 B	0->255 Dimmer Adjusting	
96	Edge C10 R	0->255 Dimmer Adjusting	
97	Edge C10 G	0->255 Dimmer Adjusting	
98	Edge C10 B	0->255 Dimmer Adjusting	

FINE6010 Batten IP Mode5			
ID	Specific	Value	Description
1	Tilt	0->255 Tilt Adjusting	Tilt
2	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
3	Dimmer	0->255	Dimmer
4	Dimmer Fine	0->255	Dimmer Fine
5	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	Shutter
6	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	
7	Zoom	0->255 (narrow->wide)	
8	Ctrl	See "Control Settings channel" table	

9	MainClrP1 R	0->255 Dimmer Adjusting	
10	MainClrP1 G	0->255 Dimmer Adjusting	
11	MainClrP1 B	0->255 Dimmer Adjusting	
12	MainClrP1 W	0->255 Dimmer Adjusting	
13	MainClrP2 R	0->255 Dimmer Adjusting	
14	MainClrP2 G	0->255 Dimmer Adjusting	
15	MainClrP2 B	0->255 Dimmer Adjusting	
16	MainClrP2 W	0->255 Dimmer Adjusting	
17	MainClrP3 R	0->255 Dimmer Adjusting	
18	MainClrP3 G	0->255 Dimmer Adjusting	
19	MainClrP3 B	0->255 Dimmer Adjusting	
20	MainClrP3 W	0->255 Dimmer Adjusting	
21	MainClrP4 R	0->255 Dimmer Adjusting	
22	MainClrP4 G	0->255 Dimmer Adjusting	
23	MainClrP4 B	0->255 Dimmer Adjusting	
24	MainClrP4 W	0->255 Dimmer Adjusting	
25	MainClrP5 R	0->255 Dimmer Adjusting	
26	MainClrP5 G	0->255 Dimmer Adjusting	
27	MainClrP5 B	0->255 Dimmer Adjusting	
28	MainClrP5 W	0->255 Dimmer Adjusting	
29	MainClrP6 R	0->255 Dimmer Adjusting	
30	MainClrP6 G	0->255 Dimmer Adjusting	
31	MainClrP6 B	0->255 Dimmer Adjusting	
32	MainClrP6 W	0->255 Dimmer Adjusting	
33	MainClrP7 R	0->255 Dimmer Adjusting	
34	MainClrP7 G	0->255 Dimmer Adjusting	
35	MainClrP7 B	0->255 Dimmer Adjusting	
36	MainClrP7 W	0->255 Dimmer Adjusting	
37	MainClrP8 R	0->255 Dimmer Adjusting	
38	MainClrP8 G	0->255 Dimmer Adjusting	
39	MainClrP8 B	0->255 Dimmer Adjusting	
40	MainClrP8 W	0->255 Dimmer Adjusting	
41	MainClrP9 R	0->255 Dimmer Adjusting	
42	MainClrP9 G	0->255 Dimmer Adjusting	
43	MainClrP9 B	0->255 Dimmer Adjusting	
44	MainClrP9 W	0->255 Dimmer Adjusting	
45	MainClrP10 R	0->255 Dimmer Adjusting	
46	MainClrP10 G	0->255 Dimmer Adjusting	
47	MainClrP10 B	0->255 Dimmer Adjusting	
48	MainClrP10 W	0->255 Dimmer Adjusting	
49	Edge W1 CW	0->255 Dimmer Adjusting	
50	Edge W1 WW	0->255 Dimmer Adjusting	
51	Edge W2 CW	0->255 Dimmer Adjusting	
52	Edge W2 WW	0->255 Dimmer Adjusting	
53	Edge W3 CW	0->255 Dimmer Adjusting	
54	Edge W3 WW	0->255 Dimmer Adjusting	
55	Edge W4 CW	0->255 Dimmer Adjusting	
56	Edge W4 WW	0->255 Dimmer Adjusting	
57	Edge W5 CW	0->255 Dimmer Adjusting	
58	Edge W5 WW	0->255 Dimmer Adjusting	
59	Edge W6 CW	0->255 Dimmer Adjusting	
60	Edge W6 WW	0->255 Dimmer Adjusting	
61	Edge W7 CW	0->255 Dimmer Adjusting	
62	Edge W7 WW	0->255 Dimmer Adjusting	
63	Edge W8 CW	0->255 Dimmer Adjusting	
64	Edge W8 WW	0->255 Dimmer Adjusting	
65	Edge W9 CW	0->255 Dimmer Adjusting	
66	Edge W9 WW	0->255 Dimmer Adjusting	
67	Edge W10 CW	0->255 Dimmer Adjusting	
68	Edge W10 WW	0->255 Dimmer Adjusting	
69	Edge W11 CW	0->255 Dimmer Adjusting	
70	Edge W11 WW	0->255 Dimmer Adjusting	
71	Edge W12 CW	0->255 Dimmer Adjusting	
72	Edge W12 WW	0->255 Dimmer Adjusting	
73	Edge W13 CW	0->255 Dimmer Adjusting	
74	Edge W13 WW	0->255 Dimmer Adjusting	
75	Edge W14 CW	0->255 Dimmer Adjusting	
76	Edge W14 WW	0->255 Dimmer Adjusting	
77	Edge W15 CW	0->255 Dimmer Adjusting	
78	Edge W15 WW	0->255 Dimmer Adjusting	
79	Edge W16 CW	0->255 Dimmer Adjusting	
80	Edge W16 WW	0->255 Dimmer Adjusting	
81	Edge W17 CW	0->255 Dimmer Adjusting	
82	Edge W17 WW	0->255 Dimmer Adjusting	
83	Edge W18 CW	0->255 Dimmer Adjusting	
84	Edge W18 WW	0->255 Dimmer Adjusting	
85	Edge W19 CW	0->255 Dimmer Adjusting	
86	Edge W19 WW	0->255 Dimmer Adjusting	
87	Edge W20 CW	0->255 Dimmer Adjusting	
88	Edge W20 WW	0->255 Dimmer Adjusting	
89	Edge C1 R	0->255 Dimmer Adjusting	
90	Edge C1 G	0->255 Dimmer Adjusting	
91	Edge C1 B	0->255 Dimmer Adjusting	
92	Edge C2 R	0->255 Dimmer Adjusting	
93	Edge C2 G	0->255 Dimmer Adjusting	
94	Edge C2 B	0->255 Dimmer Adjusting	
95	Edge C3 R	0->255 Dimmer Adjusting	
96	Edge C3 G	0->255 Dimmer Adjusting	
97	Edge C3 B	0->255 Dimmer Adjusting	
98	Edge C4 R	0->255 Dimmer Adjusting	

99	Edge C4 G	0->255 Dimmer Adjusting	
100	Edge C4 B	0->255 Dimmer Adjusting	
101	Edge C5 R	0->255 Dimmer Adjusting	
102	Edge C5 G	0->255 Dimmer Adjusting	
103	Edge C5 B	0->255 Dimmer Adjusting	
104	Edge C6 R	0->255 Dimmer Adjusting	
105	Edge C6 G	0->255 Dimmer Adjusting	
106	Edge C6 B	0->255 Dimmer Adjusting	
107	Edge C7 R	0->255 Dimmer Adjusting	
108	Edge C7 G	0->255 Dimmer Adjusting	
109	Edge C7 B	0->255 Dimmer Adjusting	
110	Edge C8 R	0->255 Dimmer Adjusting	
111	Edge C8 G	0->255 Dimmer Adjusting	
112	Edge C8 B	0->255 Dimmer Adjusting	
113	Edge C9 R	0->255 Dimmer Adjusting	
114	Edge C9 G	0->255 Dimmer Adjusting	
115	Edge C9 B	0->255 Dimmer Adjusting	
116	Edge C10 R	0->255 Dimmer Adjusting	
117	Edge C10 G	0->255 Dimmer Adjusting	
118	Edge C10 B	0->255 Dimmer Adjusting	
119	Edge C11 R	0->255 Dimmer Adjusting	
120	Edge C11 G	0->255 Dimmer Adjusting	
121	Edge C11 B	0->255 Dimmer Adjusting	
122	Edge C12 R	0->255 Dimmer Adjusting	
123	Edge C12 G	0->255 Dimmer Adjusting	
124	Edge C12 B	0->255 Dimmer Adjusting	
125	Edge C13 R	0->255 Dimmer Adjusting	
126	Edge C13 G	0->255 Dimmer Adjusting	
127	Edge C13 B	0->255 Dimmer Adjusting	
128	Edge C14 R	0->255 Dimmer Adjusting	
129	Edge C14 G	0->255 Dimmer Adjusting	
130	Edge C14 B	0->255 Dimmer Adjusting	
131	Edge C15 R	0->255 Dimmer Adjusting	
132	Edge C15 G	0->255 Dimmer Adjusting	
133	Edge C15 B	0->255 Dimmer Adjusting	
134	Edge C16 R	0->255 Dimmer Adjusting	
135	Edge C16 G	0->255 Dimmer Adjusting	
136	Edge C16 B	0->255 Dimmer Adjusting	
137	Edge C17 R	0->255 Dimmer Adjusting	
138	Edge C17 G	0->255 Dimmer Adjusting	
139	Edge C17 B	0->255 Dimmer Adjusting	
140	Edge C18 R	0->255 Dimmer Adjusting	
141	Edge C18 G	0->255 Dimmer Adjusting	
142	Edge C18 B	0->255 Dimmer Adjusting	
143	Edge C19 R	0->255 Dimmer Adjusting	
144	Edge C19 G	0->255 Dimmer Adjusting	
145	Edge C19 B	0->255 Dimmer Adjusting	
146	Edge C20 R	0->255 Dimmer Adjusting	
147	Edge C20 G	0->255 Dimmer Adjusting	
148	Edge C20 B	0->255 Dimmer Adjusting	

FINE6010 Batten IP-Mode6 (DMX control 1~8 Channel, ArtNet Control 9~148 Channel)			
ID	Specific	Value	Description
428	Tilt	0->255 Tilt Adjusting	Tilt
429	Tilt Fine	0->255 Tilt Fine Adjusting	Tilt Fine
430	Dimmer	0->255	Dimmer
431	Dimmer Fine	0->255	Dimmer Fine
432	MainShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	Shutter
433	EdgeShutter	0->4 OFF 5->9 Single flash each time value is changed within range 005->009 10->39 Pluse Slow->Fast 40->69 Opening pulse slow->fast 70->99 Closing pulse slow->fast 100->129 Double flash(0~10Hz) 130->159 Random pixel strobe slow->fast 160->199 Random all strobe slow->fast 200->250 strobe sync all pixels slow->fast 251->255 Open	
434	Zoom	0->255 (narrow->wide)	
435	Ctrl	See "Control Settings channel" table	
436	MainClrP1 R	0->255 Dimmer Adjusting	
437	MainClrP1 G	0->255 Dimmer Adjusting	
438	MainClrP1 B	0->255 Dimmer Adjusting	
439	MainClrP1 W	0->255 Dimmer Adjusting	
440	MainClrP2 R	0->255 Dimmer Adjusting	
441	MainClrP2 G	0->255 Dimmer Adjusting	
442	MainClrP2 B	0->255 Dimmer Adjusting	
443	MainClrP2 W	0->255 Dimmer Adjusting	

444	MainClrP3 R	0->255	Dimmer Adjusting	
445	MainClrP3 G	0->255	Dimmer Adjusting	
446	MainClrP3 B	0->255	Dimmer Adjusting	
447	MainClrP3 W	0->255	Dimmer Adjusting	
448	MainClrP4 R	0->255	Dimmer Adjusting	
449	MainClrP4 G	0->255	Dimmer Adjusting	
450	MainClrP4 B	0->255	Dimmer Adjusting	
451	MainClrP4 W	0->255	Dimmer Adjusting	
452	MainClrP5 R	0->255	Dimmer Adjusting	
453	MainClrP5 G	0->255	Dimmer Adjusting	
454	MainClrP5 B	0->255	Dimmer Adjusting	
455	MainClrP5 W	0->255	Dimmer Adjusting	
456	MainClrP6 R	0->255	Dimmer Adjusting	
457	MainClrP6 G	0->255	Dimmer Adjusting	
458	MainClrP6 B	0->255	Dimmer Adjusting	
459	MainClrP6 W	0->255	Dimmer Adjusting	
460	MainClrP7 R	0->255	Dimmer Adjusting	
461	MainClrP7 G	0->255	Dimmer Adjusting	
462	MainClrP7 B	0->255	Dimmer Adjusting	
463	MainClrP7 W	0->255	Dimmer Adjusting	
464	MainClrP8 R	0->255	Dimmer Adjusting	
465	MainClrP8 G	0->255	Dimmer Adjusting	
466	MainClrP8 B	0->255	Dimmer Adjusting	
467	MainClrP8 W	0->255	Dimmer Adjusting	
468	MainClrP9 R	0->255	Dimmer Adjusting	
469	MainClrP9 G	0->255	Dimmer Adjusting	
470	MainClrP9 B	0->255	Dimmer Adjusting	
471	MainClrP9 W	0->255	Dimmer Adjusting	
472	MainClrP10 R	0->255	Dimmer Adjusting	
473	MainClrP10 G	0->255	Dimmer Adjusting	
474	MainClrP10 B	0->255	Dimmer Adjusting	
475	MainClrP10 W	0->255	Dimmer Adjusting	
476	Edge W1 CW	0->255	Dimmer Adjusting	
477	Edge W1 WW	0->255	Dimmer Adjusting	
478	Edge W2 CW	0->255	Dimmer Adjusting	
479	Edge W2 WW	0->255	Dimmer Adjusting	
480	Edge W3 CW	0->255	Dimmer Adjusting	
481	Edge W3 WW	0->255	Dimmer Adjusting	
482	Edge W4 CW	0->255	Dimmer Adjusting	
483	Edge W4 WW	0->255	Dimmer Adjusting	
484	Edge W5 CW	0->255	Dimmer Adjusting	
485	Edge W5 WW	0->255	Dimmer Adjusting	
486	Edge W6 CW	0->255	Dimmer Adjusting	
487	Edge W6 WW	0->255	Dimmer Adjusting	
488	Edge W7 CW	0->255	Dimmer Adjusting	
489	Edge W7 WW	0->255	Dimmer Adjusting	
490	Edge W8 CW	0->255	Dimmer Adjusting	
491	Edge W8 WW	0->255	Dimmer Adjusting	
492	Edge W9 CW	0->255	Dimmer Adjusting	
493	Edge W9 WW	0->255	Dimmer Adjusting	
494	Edge W10 CW	0->255	Dimmer Adjusting	
495	Edge W10 WW	0->255	Dimmer Adjusting	
496	Edge W11 CW	0->255	Dimmer Adjusting	
497	Edge W11 WW	0->255	Dimmer Adjusting	
498	Edge W12 CW	0->255	Dimmer Adjusting	
499	Edge W12 WW	0->255	Dimmer Adjusting	
500	Edge W13 CW	0->255	Dimmer Adjusting	
501	Edge W13 WW	0->255	Dimmer Adjusting	
502	Edge W14 CW	0->255	Dimmer Adjusting	
503	Edge W14 WW	0->255	Dimmer Adjusting	
504	Edge W15 CW	0->255	Dimmer Adjusting	
505	Edge W15 WW	0->255	Dimmer Adjusting	
506	Edge W16 CW	0->255	Dimmer Adjusting	
507	Edge W16 WW	0->255	Dimmer Adjusting	
508	Edge W17 CW	0->255	Dimmer Adjusting	
509	Edge W17 WW	0->255	Dimmer Adjusting	
510	Edge W18 CW	0->255	Dimmer Adjusting	
511	Edge W18 WW	0->255	Dimmer Adjusting	
512	Edge W19 CW	0->255	Dimmer Adjusting	
513	Edge W19 WW	0->255	Dimmer Adjusting	
514	Edge W20 CW	0->255	Dimmer Adjusting	
515	Edge W20 WW	0->255	Dimmer Adjusting	
516	Edge C1 R	0->255	Dimmer Adjusting	
517	Edge C1 G	0->255	Dimmer Adjusting	
518	Edge C1 B	0->255	Dimmer Adjusting	
519	Edge C2 R	0->255	Dimmer Adjusting	
520	Edge C2 G	0->255	Dimmer Adjusting	
521	Edge C2 B	0->255	Dimmer Adjusting	
522	Edge C3 R	0->255	Dimmer Adjusting	
523	Edge C3 G	0->255	Dimmer Adjusting	
524	Edge C3 B	0->255	Dimmer Adjusting	
525	Edge C4 R	0->255	Dimmer Adjusting	
526	Edge C4 G	0->255	Dimmer Adjusting	
527	Edge C4 B	0->255	Dimmer Adjusting	
528	Edge C5 R	0->255	Dimmer Adjusting	
529	Edge C5 G	0->255	Dimmer Adjusting	
530	Edge C5 B	0->255	Dimmer Adjusting	
531	Edge C6 R	0->255	Dimmer Adjusting	
532	Edge C6 G	0->255	Dimmer Adjusting	
533	Edge C6 B	0->255	Dimmer Adjusting	

534	Edge C7 R	0->255	Dimmer Adjusting	
535	Edge C7 G	0->255	Dimmer Adjusting	
536	Edge C7 B	0->255	Dimmer Adjusting	
537	Edge C8 R	0->255	Dimmer Adjusting	
538	Edge C8 G	0->255	Dimmer Adjusting	
539	Edge C8 B	0->255	Dimmer Adjusting	
540	Edge C9 R	0->255	Dimmer Adjusting	
541	Edge C9 G	0->255	Dimmer Adjusting	
542	Edge C9 B	0->255	Dimmer Adjusting	
543	Edge C10 R	0->255	Dimmer Adjusting	
544	Edge C10 G	0->255	Dimmer Adjusting	
545	Edge C10 B	0->255	Dimmer Adjusting	
546	Edge C11 R	0->255	Dimmer Adjusting	
547	Edge C11 G	0->255	Dimmer Adjusting	
548	Edge C11 B	0->255	Dimmer Adjusting	
549	Edge C12 R	0->255	Dimmer Adjusting	
550	Edge C12 G	0->255	Dimmer Adjusting	
551	Edge C12 B	0->255	Dimmer Adjusting	
552	Edge C13 R	0->255	Dimmer Adjusting	
553	Edge C13 G	0->255	Dimmer Adjusting	
554	Edge C13 B	0->255	Dimmer Adjusting	
555	Edge C14 R	0->255	Dimmer Adjusting	
556	Edge C14 G	0->255	Dimmer Adjusting	
557	Edge C14 B	0->255	Dimmer Adjusting	
558	Edge C15 R	0->255	Dimmer Adjusting	
559	Edge C15 G	0->255	Dimmer Adjusting	
560	Edge C15 B	0->255	Dimmer Adjusting	
561	Edge C16 R	0->255	Dimmer Adjusting	
562	Edge C16 G	0->255	Dimmer Adjusting	
563	Edge C16 B	0->255	Dimmer Adjusting	
564	Edge C17 R	0->255	Dimmer Adjusting	
565	Edge C17 G	0->255	Dimmer Adjusting	
566	Edge C17 B	0->255	Dimmer Adjusting	
567	Edge C18 R	0->255	Dimmer Adjusting	
568	Edge C18 G	0->255	Dimmer Adjusting	
569	Edge C18 B	0->255	Dimmer Adjusting	
570	Edge C19 R	0->255	Dimmer Adjusting	
571	Edge C19 G	0->255	Dimmer Adjusting	
572	Edge C19 B	0->255	Dimmer Adjusting	
573	Edge C20 R	0->255	Dimmer Adjusting	
574	Edge C20 G	0->255	Dimmer Adjusting	
575	Edge C20 B	0->255	Dimmer Adjusting	

Control Settings channel

ID	Dmx Range	Command	Description
1	0->11	No function	
2	12->13	Reserved	
3	14->19	No function	
4	18->19	Dimmer Curve:Default(between suare and cubic)(3 Sec.)	
5	20->21	Dimmer Curve:square(3 Sec.)	
6	22->23	Dimmer Curve:cubic (3 Sec.)	
7	24->25	Dimmer Curve:Linear(3 Sec.)	
8	26->27	Dimmer Curve:S-Curve(3 Sec.)	
9	28->29	No function	
10	30->31	Display mode:30Sec(3 Sec.)	
11	32->33	Display mode:60Sec(3 Sec.)	
12	34->35	Display mode:0n(3 Sec.)	
13	36->37	No function	
14	38->39	No function	
15	40->41	No function	
16	42->43	No function	
17	44->45	No function	
18	46->47	No function	
19	48->49	No function	
20	50->51	No function	
21	52->53	No function	
22	54->55	No function	
23	56->63	Power mode:High(3 Sec.)	
24	64->65	Power mode:Stand(3 Sec.)	
25	66->67	Power mode:Theater(3 Sec.)	
26	68->69	No function	
27	70->71	Pixel mirror:Off(3 Sec.)	
28	72->73	Pixel mirror:v-mirror(3 Sec.)	
29	74->91	No function	
30	92->93	Position Feedback:Off(3 Sec.)	
31	94->95	Position Feedback:0n(3 Sec.)	
32	96->97	No function	
33	98->99	Tilt inversion:Off(3 Sec.)	
34	100->101	Tilt inversion:0n(3 Sec.)	
35	102->129	No function	
36	130->131	No function	
37	132->133	No function	
38	134->135	No function	
39	136->137	No function	
40	138->139	No function	
41	140->141	No function	
42	142->143	No function	
43	144->145	No function	
44	146->147	No function	

45	148->149	No function	
46	150->151	No function	
47	152->153	No function	
48	154->165	No function	
49	166->167	No function	
50	168->169	No function	
51	170->171	No function	
52	172->181	No function	
53	182->183	Reserved	
54	184->185	Reserved	
55	186->187	Reserved	
56	188->189	No function	
57	190->191	Reserved	
58	192->193	Reserved	
59	194->215	No function	
60	216->217	PWM Optimal (3 sec.)	
61	218->219	PWM High 1 (3 sec.)	
62	220->221	PWM High 2 (3 sec.)	
63	222->223	PWM Max. (3 sec.)	
64	224->229	No function	
65	230->231	No function	
66	232->233	No function	
67	234->235	No function	
68	236->237	No function	
69	238->239	No function	
70	240->241	No function	
71	242->243	No function	
72	244->245	No function	
73	246->249	No function	
74	250->251	Reset tilt (3 sec.)	
75	252->253	Reset head (3 sec.)	
76	254->255	Reset ALL (3 sec.)	