

9. Control Channel

9. 1DMX control channel

1channel mode

1CH	ch1	dimmer	0-255	dimmer0-100%
-----	-----	--------	-------	--------------

4channel mode

4CH	ch1	dimmer	0-255	dimmer0-100%
	ch2	strobe	0-5	Non
			6-105	standard strobe
			106-109	Non
			110-179	thunder strobe
			180-185	Non
			186-255	random strobe
			ch3	focus
	ch4	function	0-5	vacant
			6-25	fan speed,fast
			26-50	fan speed,slow
			51-75	fan speed,auto
			76-179	vacant
			180-200	reset
201-255			vacant	

5 channel mode

5CH	ch1	dimmer	0-255	dimmer0-100%
	ch2	16bitdimmer	0-255	16Bdimmer fine
	ch3	strobe	0-5	Non
			6-105	standard strobe
			106-110	Non
			110-179	thunder strobe
			180-185	Non
			186-255	random strobe
			ch4	focus
	ch5	function	0-5	vacant
			6-25	fan speed ,fast
			26-50	fan speed ,slow
			51-75	fan speed ,auto
			76-179	vacant
180-200			reset	
201-255			vacant	