

DMX control channel

FINE 300/400T&D :

channe	3CH	ch1	dimmer	0-255	
		ch2	strobe	0-5	non
				6-105	standard strobe
				106-109	non
				110-179	thunder strobe
				180-185	non
				186-255	random strobe
				ch3	function
		6-25	fast fan		
		26-50	slow fan		
		51-75	auto fan		
		76-179	non		
		180-200	reset		
		201-255	non		
	4CH	ch1	dimmer	0-255	dimmer 0-100%
		ch2	16b dimmer	0-255	16b dimmer
		ch3	strobe	0-5	non
				6-105	standard strobe
				106-109	non
				110-179	thunder strobe
				180-185	non
				186-255	random strobe
		ch4	function	0-5	non
				6-25	fast fan
				26-50	slow fan
				51-75	auto fan
				76-179	non
				180-200	reset
201-255	non				